




H 1000 / 366 546 / ...

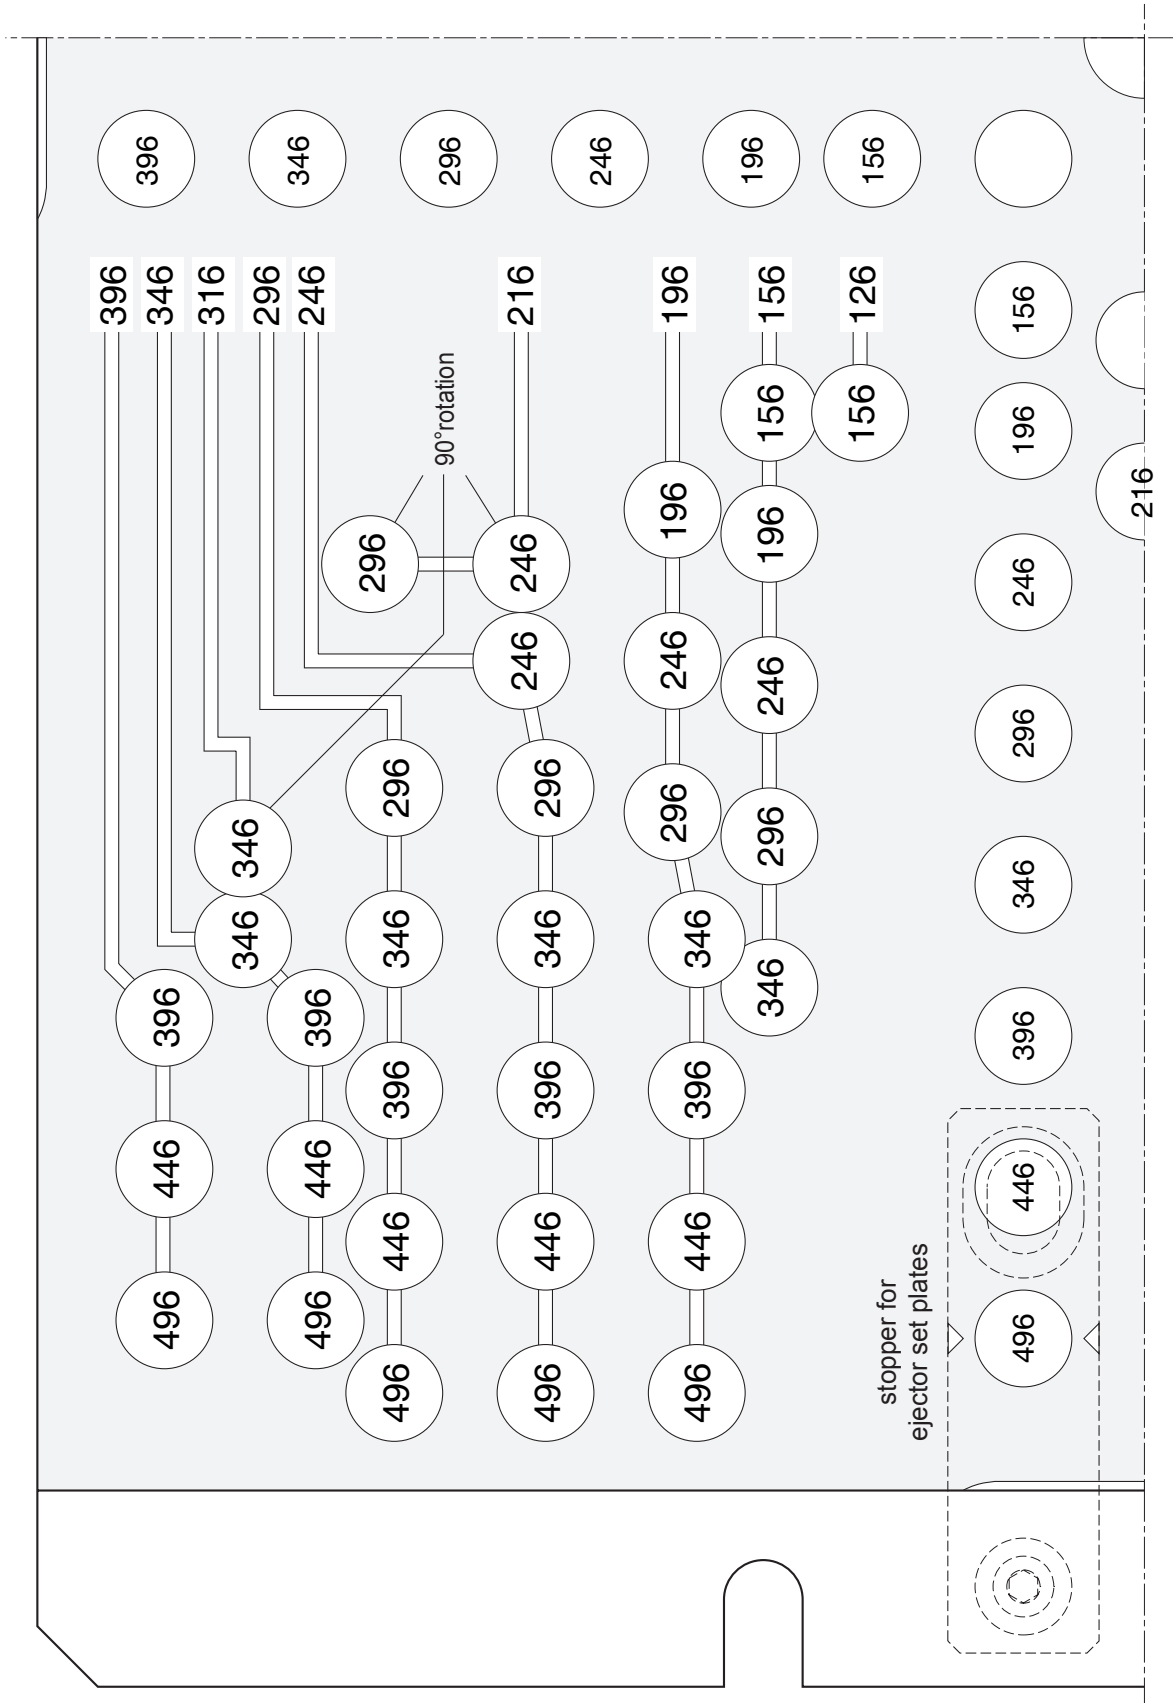


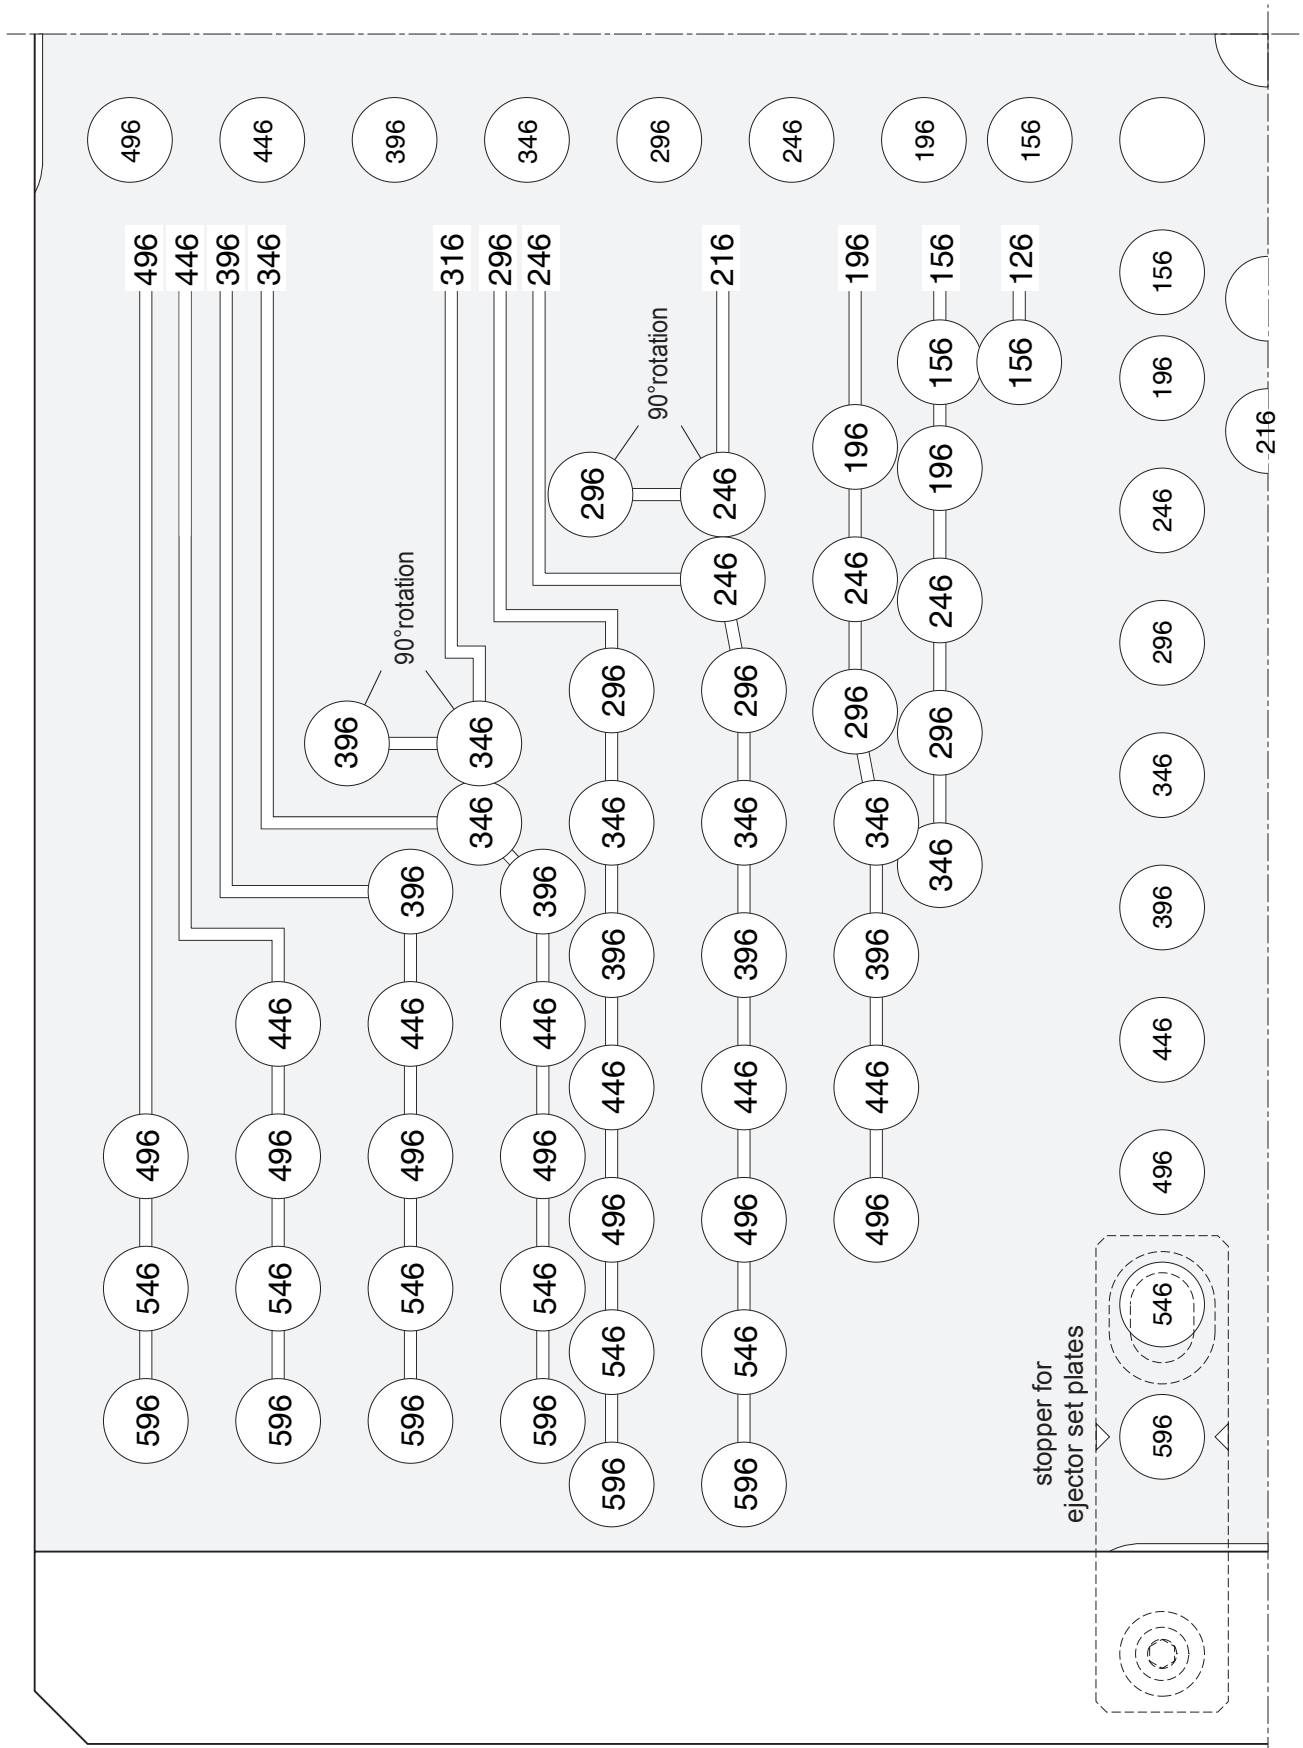

H 1000 / 556 846 / ...

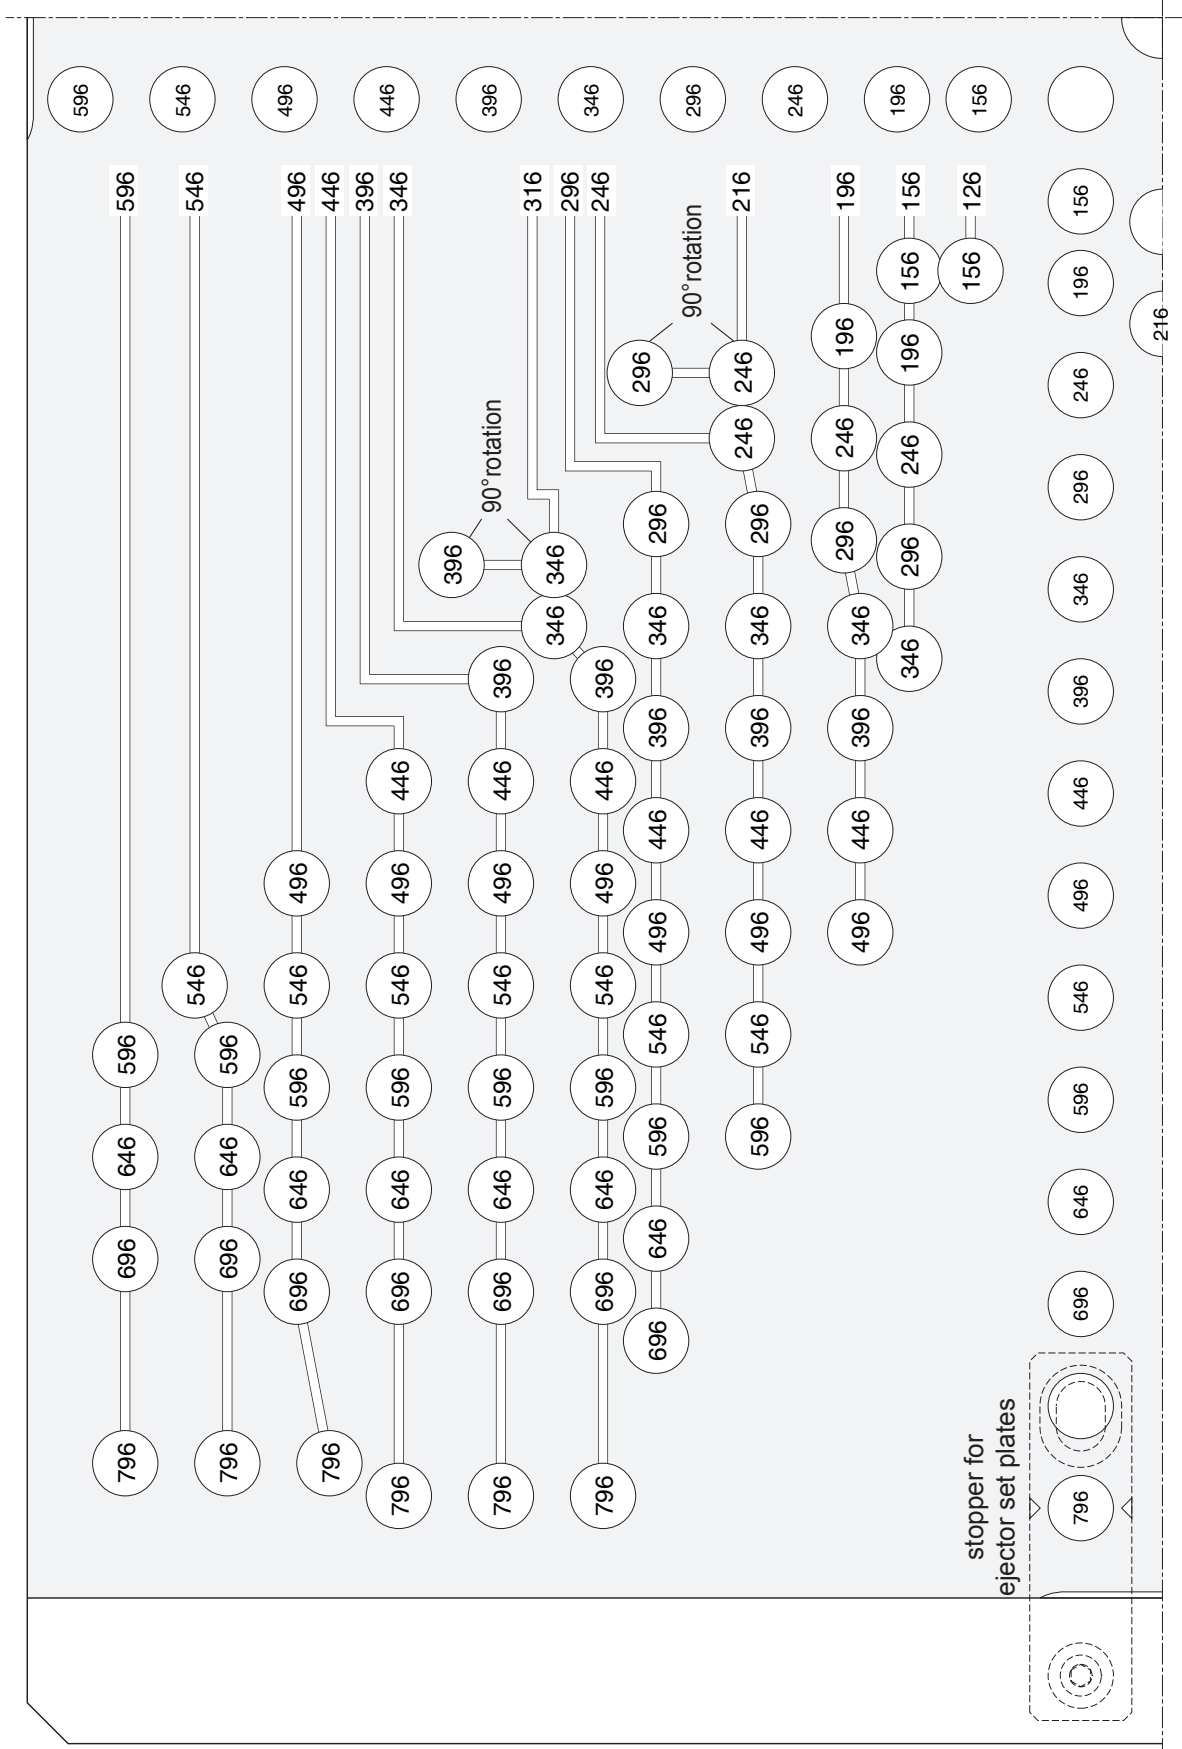

Clamping system / example

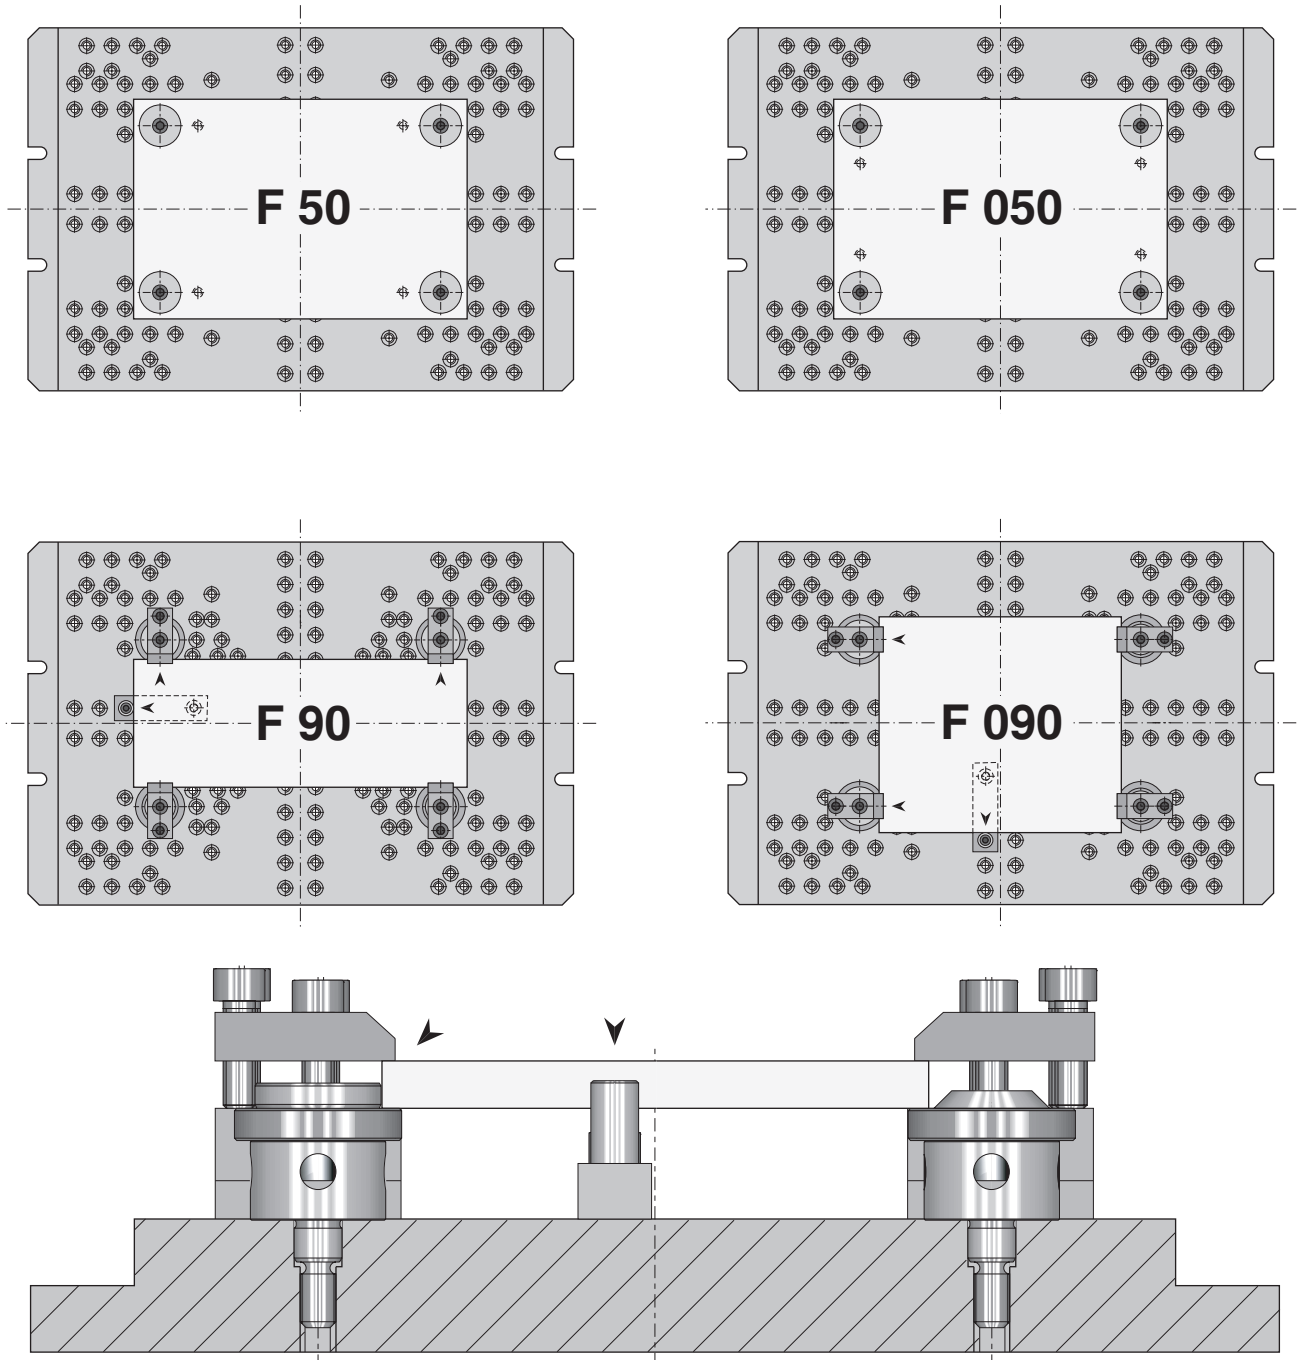

◀ = stopper

Attention! Plates for moldsizes 216 and 316 have to be rotated 90° for clamping!